

Caterlite

Vacuum Sealer Instruction Manual



(NL) **Vacuümverpakkingsmachine**
Handleiding

(FR) **Machine à emballer sous vide**
Mode d'emploi

(DE) **Vakuumverpackungsmaschine**
Bedienungsanleitung

(IT) **Confezionatrice sottovuoto**
Manuale di istruzioni

(ES) **Envasadora al vacío**
Manual de instrucciones

(PT) **Máquina de embalagem a vácuo**
Manual de instruções

Model • Modèle • Modell • Modello • Modelo • Malli:

CN515

Safety Tips

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - BS EN Codes of Practice
 - Fire Precautions
 - IEE Wiring Regulations
 - Building Regulations
- DO NOT immerse the appliance in water.
- The sealing bar becomes hot during use. DO NOT touch the sealing bar during or immediately after operation.
- Do not turn Off at the plug to halt operation; always use the Cancel button.
- Do not use the appliance for anything other than its intended use.
- Only use bags recommended by the supplier/manufacturer with the appliance.
- Always switch off and disconnect the power supply to the appliance when not in use.
- Not suitable for outdoor use.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by a CATERLITE agent or a recommended qualified technician in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance

Introduction

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this machine will provide the best possible performance from your CATERLITE product.

Pack Contents



The following is included:

- CATERLITE Vacuum Pack Machine
- Instruction Manual

CATERLITE prides itself on quality and service, ensuring that at the time of packaging the contents are supplied fully functional and free of damage.

Should you find any damage as a result of transit, please contact your CATERLITE dealer immediately.

Location of Controls

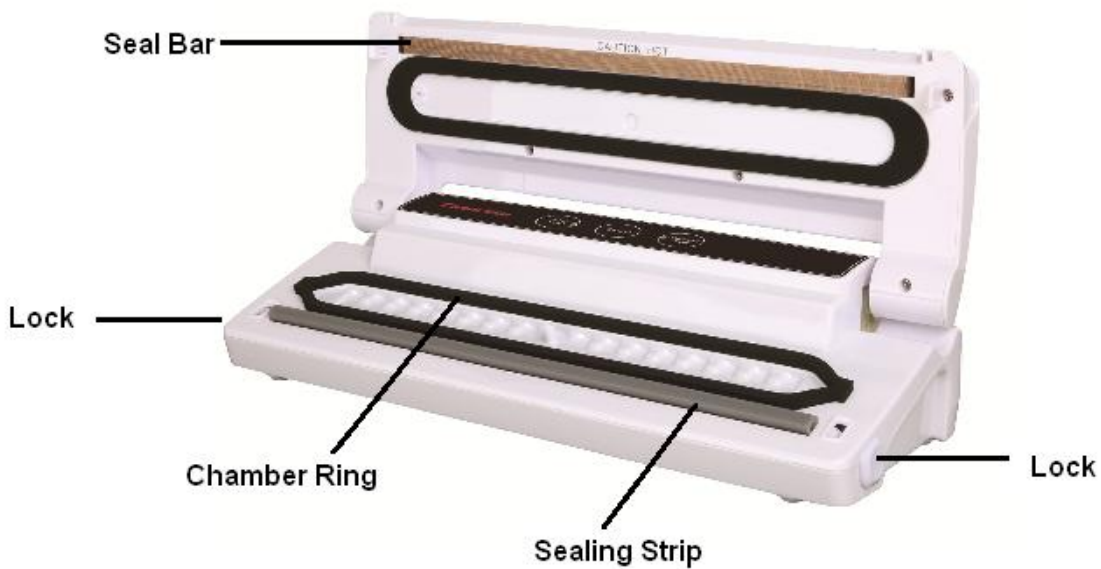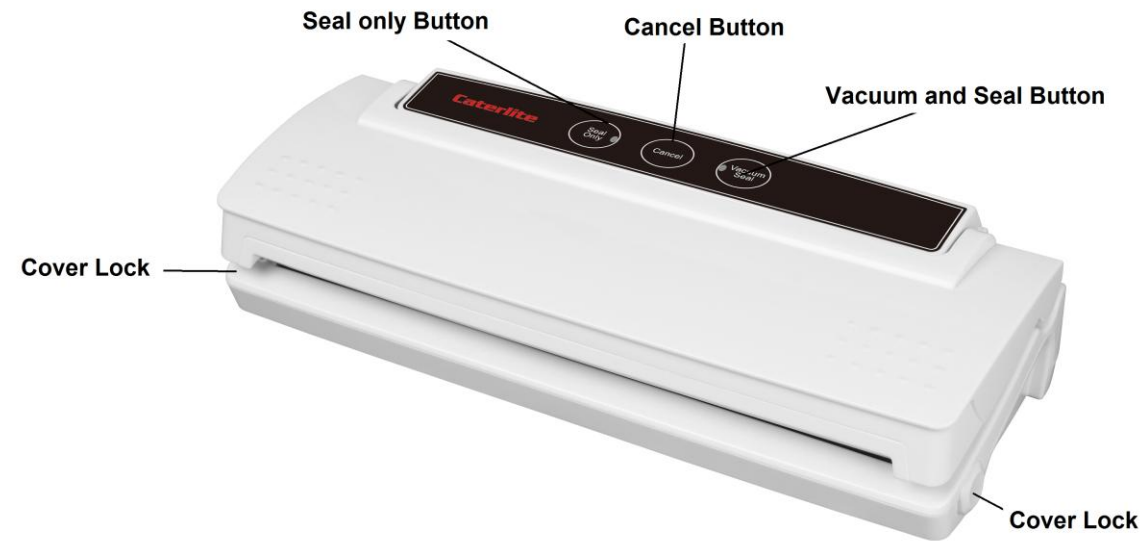

Operation

The Vacuum Sealer automatically comes on when plugged in.

The Vacuum Sealer is now ready for use.

Vacuum Packing Food

1. Place the food inside in the bag and remove any excess liquid or food residue.
2. Allow minimum of 25mm-50mm of space at the top of bag to ensure a good seal.
3. Place the open end of the bag across the Sealing Strip, keeping opening within the chamber ring and close lid, pressing down with thumbs until the locks on both sides engage.
4. Press "Vacuum Seal" button. Indicator light will turn red.
5. Vacuum pump will engage until required vacuum level is achieved. Machine will automatically go into seal mode.
6. Seal Only indicator light will turn red as the machine starts to seal.
7. When sealing is complete red Seal only light will go out. Press side lock buttons to release lid.
8. Remove bag and inspect bag and seal.

(Note: A good seal will look clear upon inspection. If the seal is spotty, incomplete, wrinkled, white or milky, remove sealed portion and run vacuum and seal process again.)

9. To abort process, press "Cancel" button. Machine will stop.

Using the "Seal Only" Function

1. Place the open end of the bag across the Sealing Strip, keeping opening within the chamber ring and close lid, pressing down with thumbs until the locks on both sides engage.
2. Press "Seal Only" button.
3. Indicator light will change to red as the machine starts to seal
4. When sealing is complete red Seal only light will go out. Press side lock buttons to release lid.
5. Remove bag and inspect bag and seal.

(Note: A good seal will look clear upon inspection. If the seal is spotty, incomplete, wrinkled, white or milky, remove sealed portion and run vacuum and seal process again.)

Cleaning, Care & Maintenance

- Always allow to cool before cleaning.
- Use warm, soapy water and a damp cloth to clean the appliance.
- Dry thoroughly after cleaning.
- A CATERLITE dealer or qualified technician should carry out repairs if required.

WARNING: Do not allow any water to spill into the appliance when cleaning.

Troubleshooting

Fault	Probable Cause	Action
The unit is not working	The Unit is not switched on	Check the unit is plugged in correctly and switched on
	Plug and lead are damaged	Call CATERLITE agent or qualified technician
	Fuse in the plug has blown	Replace the plug fuse
	Power supply	Check Power Supply
	Internal wiring fault	Call CATERLITE agent or qualified technician
Appliance does not remove all the air from the bag	Open end of bag not completely inserted	Open lid and reposition bag
	Gaskets dirty	Clean gaskets
	Open end of bag is dirty	Clean bag
	Bag may be punctured	Replace bag
	Incorrect bags used	Call Vacuum Pack machine supplier
	Suction nozzle blocked	Clear suction nozzle
	Lid is not locked into position correctly	Ensure lid is locked in position correctly
Bags are not sealing correctly	Moisture in bag under the sealing bar	Ensure inside of the bag is dry and free from moisture where it is to be sealed
	Incorrect bags used	Call Vacuum Pack machine supplier
	End of bag not placed above sealing bar	Move end of bag over sealing bar

Technical Specification

Model	Voltage	Power	Current	Vacuum Pressure (approx.)	Dimensions h x w x d mm	Weight (kg)
CN515	230V 50Hz	110W	0.5A	-0.75Bar	87 x 357 x 148	1.4

Electrical Wiring

This appliance is supplied with a 3 pin, BS1363 plug and lead, with a 3 amp fuse as standard.

The plug is to be connected to a suitable mains socket.

This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed, using a dedicated earthing circuit.

If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

Compliance

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.

CATERLITE parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.

CATERLITE products have been approved to carry the following symbol:



All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of CATERLITE. Every effort is made to ensure all details are correct at the time of going to press, however, CATERLITE reserve the right to change specifications without notice.

DECLARATION OF CONFORMITY

• Conformiteitsverklaring • Déclaration de conformité • Konformitätserklärung • Dichiarazione di conformità •
• Declaración de conformidad • Declaração de conformidade

Equipment Type • Uitrustingstype • Type d'équipement • Gerätetyp •

Tipo di apparecchiatura • Tipo de equipo • Tipo de equipamento

Model • Modèle • Modell • Modello • Modelo • Malli

Application of Council Directives(s)

Toepassing van Europese Richtlijn(en) • Application de la/des

directive(s) du Conseil • Anwendbare EU-Richtlinie(n) • Applicazione

delle Direttive • Aplicación de la(s) directiva(s) del consejo • Aplicação

de directiva(s) do Conselho

Standards

Standaarden • Normes • Normen • Standard • Estándares • Normas

Producer Name • Naam fabrikant • Nom du producteur • Name des

Herstellers • Nome del produttore • Nombre del fabricante • Nome do

fabricante

Producer Address • Adres fabrikant • Adresse du producteur •

Anschrift des Herstellers • Indirizzo del produttore • Dirección del

fabricante • Endereço do fabricante

Vacuum Pack machine

CN515

Low Voltage Directive (LVD) 2014/35/EU - recast of 2006/95/EC

Electro-Magnetic Compatibility (EMC) Directive 2014/30/EU - recast of 2004/108/EC

Restriction of Hazardous Substances Directive (RoHS) 2011/65/EU

EN 50106:2008, EN 60335-1:2012 + AC:2014 + A11:2014

EN 60335-2-45:2002 + A1:2008 + A2:2012

EN 62233:2008 + AC:2008, EN 55014-1:2006 + A1:2009 + A2:2011,

EN 55014-2:1997 + AC:1997 + A1:2001 + A2:2008 + EN

55014-2:2015, EN 61000-3-2:2006 + A1:2009 + A2:2009 + EN

61000-3-2:2014, EN 61000-3-3:2013, EN 50581:2012

Caterlite

Fourth Way,

Avonmouth,

Bristol,

BS11 8TB

United Kingdom

I, the undersigned, hereby declare that the equipment specified above conforms to the above Directive(s) and Standard(s).

Ik, de ondergetekende, verklaar hierbij dat de hierboven gespecificeerde uitrusting goedgekeurd is volgens de bovenstaande Richtlijn(en) en Standaard(en).

Je soussigné, confirme la conformité de l'équipement cité dans la présente à la / aux Directive(s) et Norme(s) ci-dessus

Ich, der/die Unterzeichnende, erkläre hiermit, dass das oben angegebene Gerät der/den oben angeführten Richtlinie(n) und Norm(en) entspricht.

Il sottoscritto dichiara che l'apparecchiatura di sopra specificata è conforme alle Direttive e agli Standard sopra riportati.

El abajo firmante declara por la presente que el equipo arriba especificado está en conformidad con la(s) directiva(s) y estándar(es) arriba mencionadas.

Eu, o abaixo-assinado, declaro que o equipamento anteriormente especificado está em conformidade com a(s) anterior(es) Directiva(s) e Norma(s)

Date • Data • Date • Datum • Data • Fecha • Data

Signature • Handtekening • Signature • Unterschrift


Firma • Firma • Assinatura

Full Name • Volledige naam • Nom et prénom • Vollständiger Name •

Nome completo • Nombre completo • Nome por extenso

Position • Functie • Fonction • Position • Qualifica • Posición • Função

08/11/2016

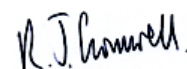

Richard Cromwell

Marketing Director

Caterlite

CN515_UK_v2